



DINOS PADEL SCOREBOARD

DATA SHEET - QUICK START INSTALLATION

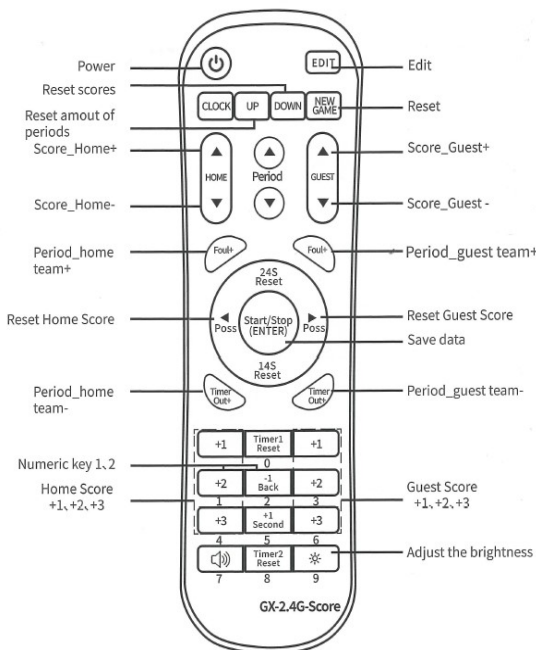

Control distance: 30 meters

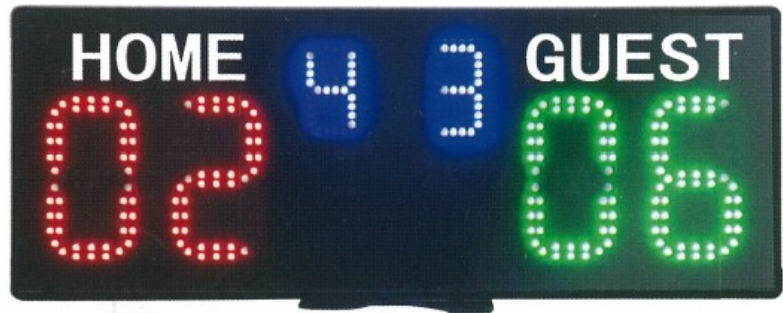

1. Power on:

After connecting with 5V/2A adapter or inserting 1-3 18650 batteries, press the power button on the scoreboard to turn it on

2. Operation of mode selection (remote control) :

After the scoreboard is powered on, press the power button on the remote control to power off, and press the button **EDIT** on the remote control to edit modes .

There are two modes to choose from : **P- 11** and **P- 12**.

(P-11: Tennis scoring mode, P-12: Freely scoring mode).

Press the number keys 1 and 2 to edit.

After editing, press the button **ENTER** to save data and then the scoreboard enters the selected mode.

P-11 Tennis scoring mode

1. **NEW GAME**: start a new game (reset)

2. **HOME ▲** : home team score will be increased within 00,15,30,40 points.

GUEST ▲ : same as above for guest team.

3. **HOME ▼** : the home team score will be decreased within 00,15,30,40 points.

GUEST ▼ : same as above for guest team

4. After the scores of the current round reach 40 points and it is tied, "AD" displayed on the scoreboard represents the winning team in this round, and "--" represents the losing team.

5. The winning period of different team will be automatically increased. When both the home team and the guest team win by six rounds, the game goes to the tiebreaker with indicator next to "TB" on the scoreboard lights up.

P-12 Normal scoring mode

1. **NEW GAME**: start a new game (reset)

2. **HOME ▲** : home team score +1 (value 0-99) ;

GUEST ▲: guest team score +1 (value 0-99) .

3. **HOME ▼** : home team score -1 (value 0-99) .

GUEST ▼ : guest team score -1 (value 0-99) .

4. **Fout+** on the left: period of home team + 1 (value 0-9) .

Fout+ on the right: period of guest team + 1 (value 0-9) .

5. **Timer out** on the left: period of home team -1 (value 0-9) .

Timer out on the right: period of guest team - 1 (value 0-9) .

6. **Brightness** : adjust the brightness of the scoreboard, which is adjustable in five levels.



3.Back Button Control

6-digit tennis scoreboard, back button to switch the scoring mode, buzzer on/off.

4.Wrist Remote Control:

By default, the **black Wrist Remote Control** controls the **HOME** and the **orange Wrist Remote Control** controls the **GUEST**.

P-11 Tennis scoring mode

Button + : bonus points ; Button - : minus points

Short press the *reset* button, return the previous step, one step only.

Long press the *reset* button, and the score of both sides becomes 0:0

P-12 Normal scoring mode

Button + : bonus points; Button - : period +1

Button reset : score-1 / period -1

Long press button + : Home/Guest score becomes 0

Long press the *reset* button, and the score of both sides becomes 0:0



5.Pairing between Wrist Remote Control and Scoreboard

(Usually be paired before shipment, this step is only for necessary use)

Short press the *Pairing button* two times, and long press any key of the Wrist Remote Control (such as the button+). After pairing, restart the scoreboard.

6.Power supply (#)

Wrist Remote Control: CR2032 battery

Remote Control: 2* AAA batteries

Scoreboard : 3* 18650 lithium batteries

(#) (batteries are included)



Scoreboard	Specifications
Material	ABS
Control	2.4 GHz remote control
Charge line	Type C USB
Weight	1 kg
Dimensions	480 x 180 x 23 mm
Warranty	2 year